

 
Book Descriptions:

Canon powershot a85 user manual




PRINTED IN MALAYSIA Downloaded From camerausermanual.com Canon Manuals. This mark denotes additional topics that complement the basic operating procedures. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Confirm that smoke or fume emissions have ceased. Please consult your camera distributor or the closest Canon Customer Support Help Desk. Downloaded From camerausermanual.com Canon Manuals. Please consult your camera distributor or the closest Canon Customer Support Help Desk. Use of another charger may cause batteries to overheat or deform, posing risk of fire or electric shock. If your camera is used for prolonged periods, the camera body may become warm. Please take care when operating the camera for an extended period as your hands may experience a burning sensation. Downloaded From camerausermanual.com Canon Manuals. However, the date, time and other camera settings may reset to default settings if the batteries have been removed for more than three weeks. Downloaded From camerausermanual.com Canon Manuals. Remove it before using the camera. Downloaded From camerausermanual.com Canon Manuals. Use AA size alkaline or Canon AA size NiMH. Never mix batteries of different types or from batteries sold separately only. For information different manufacturers. All four batteries on AA size NiMH battery handling, see Using should be identical. Downloaded From camerausermanual.com Canon Manuals. For more information on CF cards, see CF Cards and Estimated Capacities Recordable Images p. 141. Downloaded From camerausermanual.com Canon Manuals. You should always format a new CF card or one from which you wish to erase all images and other data. Downloaded From camerausermanual.com Canon Manuals. If the camera does not work properly, the inserted CF card may be malfunctioning. Reformatting the CF card may solve the problem. Downloaded From camerausermanual.com Canon Manuals. <http://www.rocha.pt/userfiles/ducati-848-evo-workshop-manual-download.xml>

- **canon powershot a85 user manual, canon powershot a85 user manual download, canon powershot a85 user manual instructions, canon powershot a85 user manual free, canon powershot a85 user manual user, canon powershot a85 user manual software, canon powershot a85 user manual review, canon powershot a85 user manual guide, canon powershot a85 user manual downloads.**

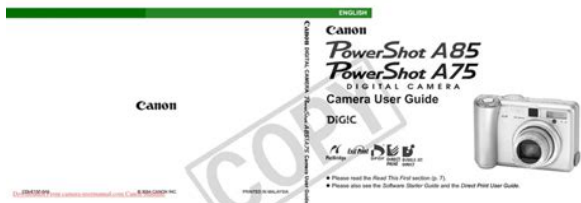

When the camera is connected to a computer, recorded images can be downloaded to and viewed with a computer p. 104. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. These figures appear when the digital zoom is activated. Resolution Still image p. 40 Sound memo WAVE file p. 92 Movie p. 55 Protection Status p. 94 Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. If the image is too dark, adjust the exposure compensation to a positive value. Similarly, adjust the exposure Downloaded From camerausermanual.com Canon Manuals. Please use the LCD monitor to shoot images up close p. 44. Shows approximate Viewfinder center of the image Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Another picture can be taken by pressing the shutter button even while an image is displayed. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Shoot the image. Flash off The flash does not fire. The flash will fire if the indicator beside the viewfinder lights orange when the shutter button is pressed halfway. Does not fire in Downloaded From camerausermanual.com Canon Manuals. LCD monitor on. Press the button. icon appears on the LCD monitor. Pressing the button again cancels the macro mode. Shoot the image. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. These figures reflect Canon's testing standard. The actual figures will vary according to the subject and shooting conditions.. Do not try to stitch images that include and press the both distant and close items. Objects SET button. may appear warped or doubled up. The shooting sequence is set. Downloaded From camerausermanual.com Canon Manuals. <http://www.premo.at/userfiles/ducati-750ss-service-manual.xml>

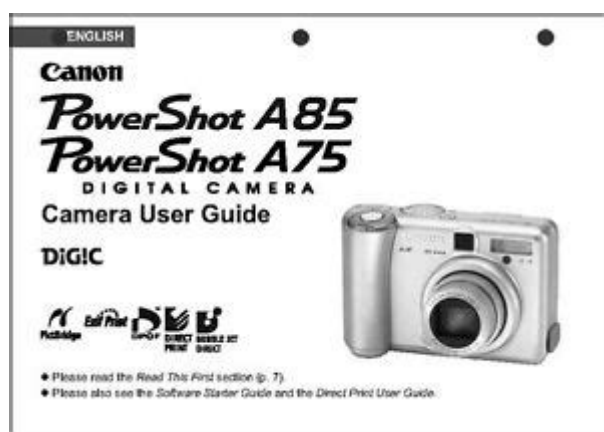 

Press return to that frame. Use the same procedures to shoot the remaining frames. A maximum of 26 images can be recorded. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Snow Underwater Results may vary depending on the subject. When shooting images underwater, always turn the power off before inserting the camera into the waterproof case sold separately. Beach Fireworks Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. The indicator on the left side of the viewfinder blinks green after a shot. You cannot shoot again until

it stops blinking. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Slide the mode switch to Press the zoom lever toward 9 images appear at once index playback. Downloaded From camerausermanual.com Canon Manuals. If you press the zoom lever once more toward, the camera returns to single image playback. Downloaded From camerausermanual.com Canon Manuals. Movie Playback Last Frame Display the last frame Volume Panel You can adjust the volume using Downloaded From camerausermanual.com Canon Manuals. Select Edit using The movie will stop if you press the SET and press the SET button. Downloaded From camerausermanual.com Canon Manuals. When there is not enough space left on the CF card, only the overwrite function is available. If this happens, a small appears on the counter of the movie editing bar. Downloaded From camerausermanual.com Canon Manuals. Once the settings are complete, press the SET button again and confirm these settings. In the Shooting mode, you can also close the menu by pressing the shutter button halfway. Downloaded From camerausermanual.com Canon Manuals. There is no shutter sound in Movie mode. Sets the video output signal standard. This setting overrides each setting for those sounds. Downloaded From camerausermanual.com Canon Manuals.

The screen on the right appears while resetting. The normal screen resumes when resetting is complete. Downloaded From camerausermanual.com Canon Manuals. Shoot the image. Check that the camera is in Shooting mode. Turn the mode dial and set the icon of the function you wish to use to Downloaded From camerausermanual.com Canon Manuals. Nevertheless, a For the correlation between aperture value certain amount of processing time may be and shutter speed, see page 76. Downloaded From camerausermanual.com Canon Manuals. See Selecting Menus and Settings p. 65. Downloaded From camerausermanual.com Canon Manuals. This is convenient when you wish to set the Point exposure adjustment on the subject. Downloaded From camerausermanual.com Canon Manuals. You can check the results of the compensation by viewing the image on the LCD monitor when it is on. Downloaded From camerausermanual.com Canon Manuals. For shooting under tungsten Tungsten and bulbtype 3wavelength fluorescent lighting. For shooting under warmwhite, coolwhite or warmwhite Fluorescent 3wavelength fluorescent lighting. Downloaded From camerausermanual.com Canon Manuals. The menu will reappear after Shooting under special light sources such as mercury lamps the shot, allowing you to adjust the setting. Downloaded From camerausermanual.com Canon Manuals. Especially the following balance. The menu displays again after the should not be changed. Press the FUNC. button. Downloaded From camerausermanual.com Canon Manuals. Select an ISO speed using A shot can be taken immediately by pressing the shutter button. The menu will reappear after the shot, allowing you to adjust the settings easily. Press the FUNC. button. Downloaded From camerausermanual.com Canon Manuals. Records subjects with Sharpening softened outlines. Records images in sepia Sepia tones. Records images in black and white. Downloaded From camerausermanual.com Canon Manuals.



<http://fscl.ru/content/bosch-logixx-8-washing-machine-manual-download>

When adjusting the flash output, consider all the shooting conditions, including the distance to the subject. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Recompose the image and press the shutter button all the way to shoot the image. AF lock is not available in modes. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. When changing the camera's orientation between the horizontal and vertical positions, you may hear noise coming from the orientation detection mechanism. This is not a malfunction. Downloaded From camerausermanual.com Canon Manuals. Press the MENU button. The Play menu appears again. Press the MENU button again to close the menu. The Sound Memo panel appears. Downloaded From camerausermanual.com Canon Manuals. You can then restart it by pressing the SET button again. Stopping Auto Play To stop Auto Play, press the MENU button. Downloaded From camerausermanual.com Canon Manuals. Please check the contents of a CF Select an image card before formatting it. Protected Icon Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. These settings will be overwritten by any marks set by your camera. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Disk onto your computer before connecting the camera to a computer. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. The image selection screen will appear directly when the Select and Transfer or the Wallpaper option was last selected. Downloaded From camerausermanual.com Canon Manuals. This is useful for downloading images to a computer in which the software is not installed.

 
<http://florentineholding.com/images/burdick-quest-stress-system-manual.pdf>



However, please note that there are certain limitations to downloading images with this method. The image will appear on the TV. Shoot or playback images as usual. If the images are not appearing on the TV when shooting, press the DISP. button. Downloaded From camerausermanual.com Canon Manuals. Press the MENU button. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Select Record using and press the SET button. Select using appears. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. See the supplied Software Starter Guide for more information on creating and adding to the My Camera Settings files. Downloaded From

camerausermanual.com Canon Manuals. Incompatible JPEG You attempted to play back an incompatible JPEG file.If this message appears immediately after you have taken a shot, the camera may not have shot the image. Switch to the Playback mode and check whether the image was actually recorded. Downloaded From camerausermanual.com Canon Manuals. Batteries are not the right type. Use only unused AAsize alkaline batteries or Canon AAsize NiMH batteries. For information about alkaline batteries, see Proper Battery Handling p. 18. Batteries are not making good Wipe the battery terminals with a clean dry electrical contact with the camera. Contact the nearest Canon Customer Help Desk. Cannot play back You attempted to play back images Computer images that cannot be played back. Downloaded From camerausermanual.com Canon Manuals. The flash doesnt The flash mode is set to flash off Set the flash mode to any other mode except fire. mode. Off. Downloaded From camerausermanual.com Canon Manuals. See from CF card is device. Formatting a CF Card p. 21. slow. Recording images to CF card takes a long time. Downloaded From camerausermanual.com Canon Manuals.

<https://1866ilovejunk.com/images/bureau-of-reclamation-concrete-manual.pdf>

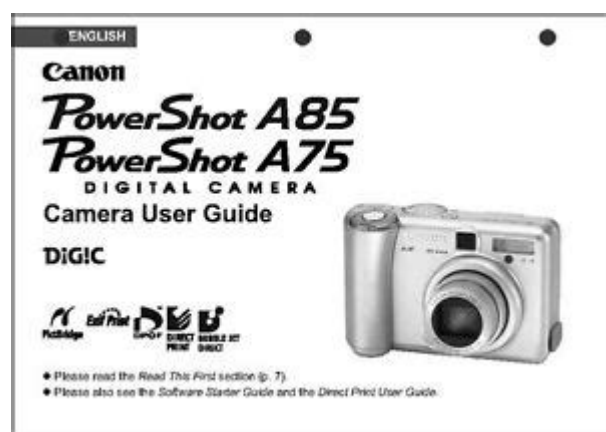

Use Canon AAsize batteries Be sure that the camera is turned off NB1AH with the CBK100 charger.At other zoom settings, the image will appear as if its corners have been cut off. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Although it is possible to select this mode at the camera, the PhotoStitch software will not be able to stitch the images together at the computer. Downloaded From camerausermanual.com Canon Manuals. These actions may damage it or lead to other problems. Never use water, paint thinner, benzene, or detergents to clean the camera, as these may cause damage or deformation. Downloaded From camerausermanual.com Canon Manuals. Subject to change without notice.Exclusive software program is included in PCcontrolled Shooting the camera kit. Recording Media CompactFlash CF card Type I File Format Design rule for Camera File System and DPOF compliant Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. Adjust the exposure stand out. Downloaded From camerausermanual.com Canon Manuals. Adjust the exposure compensation towards the end. ISO 50 equivalent ISO 400 equivalent Downloaded From camerausermanual.com Canon Manuals. If such changes or modifications should be made, you could be required to stop operation of the equipment. Canon U.S.A. Inc. One Canon Plaza, Lake Success, NY 11042, U.S.A. Tel No. 516 3285600 Canadian Radio Interference Regulations This Class B digital apparatus complies with Canadian ICES003. Downloaded From camerausermanual.com Canon Manuals. Downloaded From camerausermanual.com Canon Manuals. This is why we enclose the Table of Content for this Canon PowerShot A85 Manual article. With this table of content, you can go to the certain part of this writing simply by clicking on the sub topic below. Contents show 1 The Introduction to Canon

PowerShot A85 Manual 1.

1 Canon PowerShot A85 Camera Appearance 1.2 The Specification of Canon PowerShot A85 1.2.1 Quick Specification of Canon PowerShot A85 1.2.2 The Price and Impression of Canon PowerShot A85 2 Canon PowerShot A85 Manual User Guide The Introduction to Canon PowerShot A85 Manual

By the record, a manual is something that is really important as a complement for an electronic product, especially digital camera. From this manual, there will be a lot of information obtained. Something like specification, instruction, camera parts, settings, features, and other related information will be something possible to obtain. This is why we aim to bring the Canon PowerShot A85 Manual here. With this manual, we hope that we can help users as well as enthusiasts to understand more about this CANON camera product. Canon PowerShot A85 Camera Appearance

Before getting deeper to the Canon PowerShot A85 Manual and its specification, firstly, we will talk about the overall look of this camera first. As we all know, upgrading the products from time to time is the digital camera manufacturer's key success. This step is done to fulfill the users need as well as following the world's trend. By this reason, Canon also pays more attention on this thing. Not only upgrading the specification, but they also upgraded the look of it. Are you curious about it. Here is the review of Canon PowerShot A85 camera Look. PowerShot A85 is not the lightest camera in compact size. It comes in weightier size that weighs around 200g with no battery included. And base on the Canon PowerShot A85 manual, the dimension around 101 x 64 x 32 mm 4.0 x 2.5 x 1.3 in is also enough in compact size which is fit to keep in the pocket. However, it comes with plastic body that is wellbuild with cool handgrip for better handling. Provided in silver body, this camera looks very fine to see. Compared to its predecessor, the camera also has larger LCD screen in 1.8 inch and 118,000 pixels screen dots for displaying bright pictures.

<http://sh8ke.com/wp-content/plugins/formcraft/file-upload/server/content/files/16272089dea3fe---bra via-manual-pdf.pdf>

The Specification of Canon PowerShot A85 Let's have a look at the replacement of A70 the entry level camera which is named with Canon PowerShot A85. It's a compact digital camera that comes with upgraded features and several improvements. This camera is also known as a consumerlevel camera that comes with cheap price. So, now let's see whether it is worthbuying or not. Now, let's find out the power of this camera in producing pictures. For getting more detailed picture, it has 3x optical zoom function that range equivalent to a 35105mm lens on a 35mm camera through a 5.416.2mm lens. It is also slightly increased with 3.6 digital zoom functions too. Here we will find 13 shooting mode that is extended with six special scene present to help you easy in getting tricky shooting condition. Canon PowerShot A85 manual also says that the camera is added with 3 minute movie clips with sounds in VGA mode up to 30 frames per second. Not only that, it also provides expanded direct printing function. When it is connected to Canon compact photo printer, the ID photo and also Movie Print functions are supported. One thing that is fun to see is that the camera is accessorized with waterproof case up to 40 depth which is fine to do photography while diving, surfing, skiing, snorkeling and general beach fun. This Canon PowerShot A85 is designed for all users with easy to use system. And this cool design also brings certain fun for you. Is it cheap enough Is it worthbuying Read another review about this camera in this page. Canon PowerShot A85 Manual User Guide We have said previously that the purpose of this article is to bring the Canon PowerShot A85 Manual onto the surface. With this manual, we hope that we can help both user and enthusiast to understand about this camera product more than before. So, after all, they can be better in operating as well as treating this camera. And one thing to be noted, that we will provide the Canon PowerShot A85 Manual in PDF file format.

www.dsnjl.com/userfiles/files/casio-edifice-watch-manual.pdf

So, before downloading it, make sure that you have PDF reader software installed in it. Download

PowerShot A85 User Manual Lastly, that's all of the information we need to share regarding to the Canon PowerShot A85 Manual. Hopefully, what we can share here will be able to update your technological knowledge, especially for Canon PowerShot A85 Camera. But, if you think you have other ideas or opinion about this product, you are freely to put them in the comment session below. And, if you think that this Canon PowerShot A85 Manual is helpful, you can share this article in your personal page. So, the benefit of this writing can spread in the wider range of audience. Share Pinterest Tweet Linkedin Email Prev Article Next Article Related Articles Bring it Back. By continuing to use this website, you agree to their use. Please consider supporting us by disabling your ad blocker. Refresh. Camera User Guide 3 Playback. PRINTED IN MALAYSIA 1 Preparing the Camera. Camera User Guide Camera User Guide Quick Reference. Camera User Guide Zoom Shooting Modes Auto The camera automatically selects settings. Portrait The background is blurred and the subject is in clear focus. Landscape For shooting wide landscape scenes. Night Scene For photographing human subjects against the backdrop of an evening sky or a night scene. Fast Shutter For shooting fast moving objects. Slow Shutter For shooting moving objects to make them appear blurred, such as river rapids. Special Scene For shooting with settings appropriate for certain types of scenes. Stitch Assist Images shot in Stitch Assist mode can be merged together on a computer to make a single panoramic image. Movie For shooting movies. For details, see "Functions Available in Each Shooting Mode" at the end of the Camera User Guide. Changing the Displayed Information Press the button to switch the displayed information as follows.

Shooting Mode LCD Monitor On No Information LCD Monitor On Information View LCD Monitor Off Playback Mode Standard Information View Detailed Information View No Information 5 Printing with a Direct Print Compatible Printer. Printing of the image will start. A. Slide the mode switch to Playback. B. Playback the images. Please turn over D. Open the CF card slot cover. B. Insert the batteries as shown. A. Open the battery cover. Use the \leftarrow button to select the items you wish to set, and the \rightarrow button to change the value. The power indicator lights. Power Indicator B. Set the mode switch to Shooting and set the shooting mode dial to \cdot . Telephoto Zoom in on the subject. Playback Slide the mode switch to. Macro Press the button to display the on the LCD monitor. Learn the names of camera components. 5. Print the images. 6. Install the software. Connect the camera to a computer. 7. Download the images to a computer. What you can do with the software The various ways of using the software The following manuals are supplied with your camera. Please refer to them as needed. Camera User Guide, Software Starter Guide Never connect the camera to the computer before the software is installed. Downloading Images Using Camera Operations Direct Transfer D. Confirm that the button lights blue. E. Confirm that is selected in the Direct Transfer menu in the camera's LCD monitor and press the button. You can confirm information such as the destination folder for images. The downloaded images will appear as thumbnails tiny versions in the main window of ZoomBrowser EX. Downloaded images are saved in separate folders according to the date on which they were shot. Software Starter Guide A. From the Explorer View section of the window, click the folder into which the images are to be downloaded. Explorer View B. Click the Camera Window, making it active. Image download is complete. Getting the Most out of the Software.

To selectively download images, use the Direct Transfer menu. Camera Window Thumbnail Thumbnail To DIGITAL terminal. Camera User Guide. Please read the Read This First section p. 7. Please also see the Software Starter Guide and the Direct Print User Guide. Software Starter Guide Installing the Software This Guide Connecting the Camera to a Computer. This Guide Software Starter Guide Downloading Images to a Computer. No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon. Mode Dial. This mark denotes issues that may affect the camera's operation. This mark denotes additional topics that complement the basic operating procedures. Warranty Limitations. This camera's warranty is only effective in the

country of sale. Disassembly or alteration may result in highvoltage electrical shock. Internal inspections, alterations and repairs should be conducted by qualified service personnel authorized by your camera distributor or a Canon Customer Support Help Desk. Immediately turn the cameras power off, remove the camera batteries or unplug the power cord from the power outlet. The camera terminal of the battery charger cord and the compact power cord is designed for exclusive use with your camera. Do not use it with other products or batteries. There is a risk of fire and other hazards. Do not camera or subject it to strong impacts or shocks that could lead to injury or damage the equipment when wearing or holding it by the strap. Storing the camera for extended periods with batteries installed may cause battery leaks, which can damage the camera. Ring Release Button Lens Zoom Lever p. 33, 46, 58, 59 Ring Microphone. Terminal Cover DIGITAL Terminal p. 107. Green Power is on. Use the shooting mode dial to select a Shooting mode. Auto p. 33 The camera automatically selects settings. Auto. Image Zone.

The camera uses four AAsize alkaline batteries supplied with the camera. You may also use separately sold nickel metal hydride NiMH batteries. Also due to their specifications, alkaline batteries may expire faster than NiMH batteries. If you are using the camera in cold areas or for a long time, we recommend using Canon AAsize NiMH Battery Kit NB4200 a four piece set. Batteries are beginning to run low. Replace or recharge batteries promptly. Replace or recharge the batteries if you wish to continue using the camera. Installing a CF Card Slide the CF your camera see next page. The card supplied with the camera may be used without further formatting. About CF Cards. CF cards are highprecision electronic devices. Do not bend them, apply force to them, or subject them to shocks or vibration. When a nonCanon brand CF card is malfunctioning, reformatting it may solve the problem. CF cards formatted in another camera, computer or peripheral device may not operate correctly. When that happens, reformat the CF card with this camera. Select a language using,, or and press the SET button. If you press the MENU button without pressing the SET button, the camera reverts to the Set up menu without setting the language. Shooting Mode. Shooting Mode Slide the mode switch to When a printer sold separately is connected, images can be printed see the Direct Print User Guide. When a printer sold separately is properly connected,,, or appears on the LCD monitor. DISP. Button Off. Shutter Speed. Playback Mode. Standard Display. File Number. DISP. Button. No Display. Histogram. Movie Length. Shooting Mode Exposure Compensation White Balance Photo Effects ISO Speed Flash Macro Mode Manual Focus Light Metering Mode Resolution Movies Low Battery Aim the camera at the subject you wish to shoot. In some cases, portions of images shot up close that appear in the viewfinder will not appear in the recorded image. Please use the LCD monitor to shoot images up close p. 44. Shooting with the Viewfinder.

Reviewing an Image Right after Shooting. Mode Dial. Changing the Image Display Duration The length of time images are displayed after a photo has been taken can be changed from 2 seconds to 10 seconds or turned off. Select Use this mode to shoot movie clips. Shooting and sound recording starts simultaneously p. 55. Use this mode when taking shots that you want to combine into a panorama p. 48. Stitch Assist. Special Scene. See page 152 for settings that can be changed in this mode. Compression Superfine Fine Normal. Purpose. High Shoot higher quality Quality images. L. Large. Shoot normal quality images. Normal Shoot more images. High. Movies can be shot with the following resolutions. You can shoot the image right after selecting settings by pressing the shutter button. Flash off The flash does not fire. This operation may not work in certain Shooting modes p. 152. Shots cannot be taken while the flash is charging. The flash may take up to approximately 10 seconds to charge in some cases. Actual times will vary according to usage and the battery charge. The flash setting is saved when the camera is turned off in the,, and Shooting modes. Even better results can be obtained by shooting with the lens set to a wide angle, increasing the lighting in indoor available in. Digital Zoom. Press the lever toward to zoom back out. The combined magnifications of the optical zoom and digital zoom are displayed. Continuous shooting is available when the shutter button is fully pressed. Press the shutter button all the way to shoot. Shooting will

stop when the shutter button is released. These figures reflect Canon's testing standard. For good results, pan/swivel the camera to take successive shots. To shoot closeups, slide the camera over the subject, keeping it parallel as you move. Shooting See page 152 for settings that can be changed in this mode. Compose and shoot the second image so that it overlaps the first.

Prevents camera shake and maintains the subject's true color when shooting under mode. Results may vary depending on the subject. When shooting images underwater, always turn the power off before inserting the camera into the waterproof case sold separately. Underwater Some settings are not available with certain Shooting modes. Shoot the image. Recording camera to shoot movies p. 21. The card supplied with the camera may be used without further formatting. The AE, AF, white balance and zoom settings are set and locked to the settings of the first frame. The last recorded image appears single image playback. Use to move to the images that have been shot with another camera or edited on a computer with other software applications. Jump Bar The jump bar disappears and the camera returns to index playback. If you press the zoom lever once more toward, the camera returns to single image playback. When a movie has finished playing, it will display the last frame. If the SET button is pressed in this state, the camera will revert to the movie playback panel. Select Play using or and press the SET button. The temporarily edited movie will start playing. When is selected, the edited movie is not saved and the camera reverts to playback. Protected movies cannot be edited. It may take approximately 3 minutes to save an edited movie. If the batteries run out of charge partway through, edited movie clips cannot be saved. Protected images cannot be erased with the erase function p. 94. Select a FUNC. menu option using or and select setting contents using or. Press the FUNC. button. Shoot the image. Compression ISO Speed p. 84 Photo Effect Light Metering . Shooting Mode. Camera Menu. Rec. Menu. Play Menu Once the settings are complete, press the SET button again and confirm these settings. For details, see Registering the My Camera Settings p. 116 or the Software Starter Guide. Play Menu.

<https://formations.fondationmironroyer.com/en/node/9529>